




# BOAT VIDEO APP BASICS

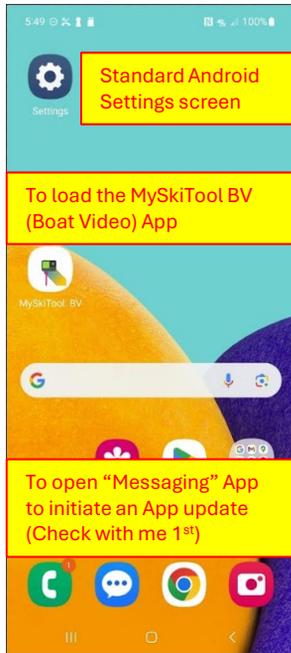

If you need to connect the phone to WiFi, make sure you do not set to Auto Reconnect, as that interferes with App operation. Make WiFi is active, but not connected before starting the BoatVideo App

Boat Video APP when running properly



Use Skier-Icon to "Enter" a name or a Lens setting

Add a new name, Use Skier-Icon to set the name in the list, and save to SD Card

IF FOR SOME REASON THE GOPRO DOES NOT CONNECT, POWER OFF THE GOPRO, REMOVE AND RESET THE BATTERY, AND POWER THE GOPRO BACK ON (THIS RESETS TO GOPRO WIFI).  
ON SOME OCCASIONS, A PHONE REBOOT IS REQUIRED (TO RESET THE CELL CONNECTION)

Shows proper BT connection

Shows proper WiFi connection

Select "MODE" (Slalom is default)

To Select a name for the pass

There are modes to set the Lens (Narrow, Linear, Wide)  
• Cycle to the desired SLALOM-LENS and the click on the Skier-Icon to set it

Default setting is SKI-RECORD and POST NOW. There are experimental "POST LATER" modes

A list can be loaded from the Judge/Manage Page, and is save to local SD card, and will auto load